IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ AND SAVE THIS FOR FUTURE REFERENCE

AR Acoustic Research

user manual
guide de l'utilisateur

ARS3i

Made for
iPod iPhone

Conçu pour
iPod iPhone



EN/F
It is important to read this user manual prior to using your new product for the first time.
Nous vous recommandons de lire ce manuel avant d'utiliser votre nouveau produit pour la première fois.

CAUTION
RISK OF ELECTRIC SHOCK DO NOT OPEN
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
RISQUE DE CHOC ELECTRIQUE NE PAS OUVRIR
ATTENTION: POUR EVITER LES RISQUES DE CHOC ELECTRIQUE, NE PAS ENLEVER LE COUVERCLE (OU LE DOS). AUCUNE PIECE INTERNE UTILISABLE PAR L'UTILISATEUR. CONFIER L'ENTRETIEN AU PERSONNEL QUALIFIE.
SEE MARKING ON BOTTOM / BACK OF PRODUCT

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

ADDITIONAL SAFETY INFORMATION

- The AC/DC adapter supplied with this product is intended to be correctly oriented in a vertical or floor mount position.
- Do not use unauthorized chargers or power adapters. Use only chargers or power adapters that came with your product or that is listed in the user's guide.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openings.
- Do not place lighted candles, cigarettes, cigars, etc. on the product.
- Connect power cord only to AC power source as marked on the product.
- Care should be taken so that objects do not fall into the product.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- The marking information is located at the bottom of apparatus.
- To be completely disconnect the power input, the AC/DC adaptor of apparatus shall be disconnected from the mains.
- AC/DC adaptor is a disconnect device. The AC/DC adaptor should not be obstructed OR should be easily accessed during intended use.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- No naked flame sources such as lighted candled should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- The use of apparatus in moderate climates.

Important battery precautions

- Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak.
- Discard any leaky or deformed battery immediately. They may cause skin burns or other personal injury.
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

Ecology
Help protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles.

FCC Information

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Audiovox Electronics Corp. could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Important information

Technical information
Product: Digital Photo Frame for iPhone/iPod
Brand: Acoustic Research
Model: ARS3i

For your records
In the event that service should be required, you may need the model number and the serial number. In the space below, record the date and place of purchase and the serial number:
Model No.:
Date of Purchase:
Place of Purchase:
Serial No.:

Electrical power information
AC/DC Adaptor:
Input: 100 -240 V AC, 50/60 Hz
Output: 6 V DC, 3A

"**Made for iPod**" and "**Made for iPhone**" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPhone, iPod, iPod classic, iPod nano and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

Before you begin

Dear Acoustic Research customers,
Thank you for puchasing the Acoustic Research digital photo frame for iPhone/iPod. This product includes a 7" (16:9 Aspect Ratio) TFT Liquid Crystal Display (LCD) monitor, clock function, music playback, photo function, video function and support SD/MMC/MS memory cards or USB flash drives. This product plays mp3 and Windows Media™ audio (WMA) content.

To start using your digital photo frame for iPhone/iPod, please follow the instructions in the following sections.

Unpacking the unit
You should find the following items in the box:

- digital photo frame for iPhone/iPod
- AC/DC power adapter
- Rod support
- User manual
- muvee software CD ROM

Installing the rod support
Screw the rod support into the hole at the rear to support the unit.



Connect the main unit power

- Connect the supplied power adapter to the product's DC 6V jack, and connect to a convenient wall outlet.

- Once connected with power and switch the **ON/OFF** button to **ON**, the Main menu appears.



- Refer to the following pages for more information on setting up date, time, playing music and video and viewing photos.

Battery back-up operation
This digital photo frame for iPhone/iPod is equipped with a memory holding system that can be powered with 2 "AAA" batteries (not included). The power failure protection circuit will not operate unless batteries are installed. When normal household power is interrupted, or AC/DC power adapter is unplugged, the batteries will power the digital photo frame to keep track of time settings programmed into memory.

To install or replace the batteries:
1. Remove battery compartment door (located at the rear of the digital photo frame) by applying thumb pressure to the tab on battery door and then lift the door out and off the cabinet.
2. Insert or replace 2 AAA batteries.
3. Replace the compartment door.
- It is recommended to plug the unit for AC power while replacing batteries to avoid the loss of clock and mode settings.

Power failure indicator
When AC power is interrupted (disconnected) for a short period of time, time settings will change (unless batteries are installed). After AC power is restored (reconnected), the Digital Display will blink to indicate that power was interrupted and you should readjust the time settings.

Windows Media is trademarks of Microsoft Corporation in the United States and other countries.

General controls

Top view

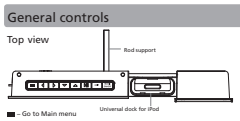

■ – Go to Main menu

◁, ▷, △ or ▽
– Menu mode: press to navigate in menus in the indicated directions
– Photo, music and video mode: press ◁ or ▷ to skip to previous or next file; press △ or ▽ to adjust the volume
– Photo mode: press and hold ◁ or ▷ to listen to previous or next music if background music is on

⏯ – Enter the selected mode; press to play/pause music, photo and video playback; press and hold to stop playback and return to music list or thumbnail mode

EDIT – Enter or exit the pop-up Edit menu

MUSIC ON/OFF – Turn on/off the background music during slideshow in Photo mode; turn on/off the music in the music mode.

Front view



Back view

POWER ON/OFF– To turn on/off the unit

Battery compartment – To install 2 x AAA batteries



General controls

Side view



SD/MMC/MS card slot – To insert SD/MMC/MS card

USB connector – To connect to USB device

DC jack – Connect to the power adapter

In Main menu mode, when there is no operations for about one minute, slideshow will be automatically started. The priority of photos to be displayed in the slideshow is first photos on Card, then USB devices and lastly photos stored in the internal memory of the unit (i.e. Favorites).

Clock

Setting date and time
1. In Main menu, press ◁ or ▷ to select . Press ⏯ to enter Settings menu.
2. Press △ or ▽ to highlight the Date or Time.
3. Press ◁ or ▷ to highlight the option.
4. Press △ or ▽ to change the values and then press ⏯ to confirm.
5. Press △ or ▽ to highlight the Time Format.
6. Press ◁ or ▷ to change the values and then press ⏯ to confirm.
7. Press ■ to exit Settings menu. You can also press △ or ▽ to highlight Exit to exit Settings menu.

Entering clock mode
1. In Main menu, press ◁ or ▷ to select . Press ⏯ to enter Clock mode. Clock and calendar will be displayed.
2. Slideshow will then be started. The priority of photos to be displayed in the slideshow is first photos on Card, then USB devices and lastly photos stored in the internal memory of the unit (i.e. Favorites).

iPod/iPhone

Connecting iPod/iPhone
1. Slide the speaker to the right to open the universal dock for iPod.

2. Place the appropriate adapter provided with your iPod/iPhone and then place your iPod/iPhone on the universal dock for iPod/iPhone.

Charging the iPod/iPhone
You may charge the battery of your iPod/iPhone through the universal dock for iPod while the unit is turned off (standby mode) or in the Music, Photo, Clock or iPod/iPhone mode. Charging control should be operated on the iPod/iPhone. It is not necessary to charge in iPod mode, unless you are listening to the iPod.

Made for:
- iPhone 3GS 16GB, 32GB
- iPhone 3G 8GB, 16GB
- iPod touch 3rd generation 32GB, 64GB
- iPod touch 2nd generation 8GB, 16GB, 32GB, 64GB
- iPod touch 1st generation 8GB, 16GB, 32GB
- iPod nano 5th generation 8GB or 16GB
- iPod nano 4th generation (video) 8GB, 16GB
- iPod nano 3rd generation (video) 4GB, 8GB
- iPod classic 80GB, 120GB, 160GB
- iPod nano 2nd generation (aluminum) 2GB, 4GB, 8GB
- iPod nano 1GB, 2GB or 4GB
- iPod 5th generation (video) 30GB, 60GB, 80GB
- iPod mini 4GB, 6GB
- iPod 4th generation 20GB, 40GB
- iPod 4th generation (color display) 20GB, 30GB, 40GB, 60GB

Listening to iPod/iPhone

- Dock your iPod/iPhone to the universal dock.
1. In Main menu, press ◁ or ▷ to select iPod/iPhone . Then press ⏯.
2. Press ◁ or ▷ to select for music, or select for photo or video and press ⏯.
- Playback of music file from the iPod/iPhone starts automatically.
- Press ◁ or ▷ to skip to the previous or next music file. Press and hold ◁ or ▷ to search backward or forward for a music file.
- Start playback of photo or video files on your iPod/iPhone manually first. The iPod/iPhone cannot play video automatically.
- Use the controls on iPod/iPhone for photo and video files playback.
- If no iPod/iPhone is connected in the iPod mode, the unit will show "The selected device is not connected".

Upgrade the latest iPod/iPhone firmware from Apple official website.

Music

Playing music

- The unit can only support USB flash drive and memory card which formatted in file system of FAT or FAT32.
- The supported music file formats include mp3, WMA & WAV.

1. Insert an SD, MMC or MS card into the SD/MMC/MS card slot or insert a USB flash drive into the USB connector.
2. In Main menu, press ◁ or ▷ to select the source of music from Card , USB or Favorites . Then press ⏯.
3. Press ◁ or ▷ to select and press ⏯.
4. Press △ or ▽ to select the file you want to play.
5. Press ⏯ or **MUSIC ON/OFF** to start playback.
6. To pause the playback, press ⏯. Press ⏯ again to resume playback. Press **MUSIC ON/OFF** to stop playback.
7. Press ◁ or ▷ to select the previous/next file. Press and hold ◁ or ▷ to rewind or fast forward.
8. Press △ or ▽ to adjust the volume. The volume bar will be displayed for a while once you change the volume.

If no music files are found in your selected source, "No file in the selected device" will be displayed.

Copying music
1. During playback of music files on SD, MMC or MS card or USB, press **EDIT** to enter the pop-up Edit menu. Press **EDIT** in the music list before playback can also enter the pop-up Edit menu.
2. Press △ or ▽ to select **Copy** and then press ⏯.
3. "Copy to internal memory? If the same file exist will be overwritten." will be displayed. Press ◁ or ▷ to select **Yes** and then press ⏯ to confirm.
4. "Copy successfully!" will be displayed. If the unit does not have enough free internal memory, "No enough memory" will be displayed. Delete some files before you try to copy files again.
5. Press **EDIT** or press △ or ▽ to select **Exit** to exit the Edit menu.

If the video in the internal memory is viewed now, the "Copy" item is disabled because the video in the internal memory cannot be copied to the external memory. e.g. an SD card

Music

Deleting music
1. During playback of music files in the internal memory of the unit (i.e. Favorites , press **EDIT** to enter the pop-up Edit menu.
2. Press △ or ▽ to select **Delete.**
3. "Are you sure you want to delete the selected file" will be displayed. Press ◁ or ▷ to select **Yes** and then press ⏯ to confirm.
4. "Delete successfully!" will be displayed.
5. Press **EDIT** or press △ or ▽ to select **Exit** to exit the Edit menu.

Repeat
1. During playback of music files on SD, MMC or MS card, USB or music files in internal memory of the unit (i.e. Favorites , press **EDIT** to enter the pop-up Edit menu. Press **EDIT** in the music list before playback can also enter the pop-up Edit menu.
2. Press △ or ▽ to select from **Repeat one**, **Repeat all** or **Shuffle** and then press ⏯.
3. Press **EDIT** or press △ or ▽ to select **Exit** to exit the Edit menu.

Photo

Viewing photo

JPEG is the only supported photo file format.

1. Insert an SD, MMC or MS card into the SD/MMC/MS card slot or insert a USB flash drive into the USB connector.
2. In Main menu, press ◁ or ▷ to select the source of photo from Card , USB , and Favorites . Then press ⏯.
3. Press ◁ or ▷ to select and press ⏯.
4. Press ◁, ▷, △ or ▽ to highlight the desired file.
5. Press ⏯ to start photo slideshow.
6. To pause the slideshow playback, press ⏯. Press ⏯ again to resume playback.
7. Press ◁ or ▷ once to select the previous/next photo file. Press and hold ◁ or ▷ to skip to previous/next music file if background music is on.
8. Press and hold ⏯ to stop slideshow and background music (if turned on) and return to the thumbnail screen.
9. Press △ or ▽ to adjust the volume. The volume bar will be displayed for a while once you change the volume.

If no photos are found in your selected source, "No file in the selected device" will be displayed.

Settings
1. During slideshow playback, press **EDIT** to pause slideshow and enter the pop-up Edit menu.
2. A pop-up menu shows:
- **Rotate** – Press ⏯ repeatedly to rotate the photo by 90° clockwise each time.
- **Zoom** – Press ⏯ repeatedly to zoom in the current photo. The zoom in feature cycles through X2, X3 and X4, then returns to normal size.
- **Effect** – Press △ or ▽ to select from **Color enhancement**, **Black and white**, **Old fashion** and **Normal**. Then press ⏯ to confirm.
- **Copy**
  - Press △ or ▽ to select **Copy** and then press ⏯.
  - "Copy to internal memory? If the same file exist will be overwritten." will be displayed. Press ◁ or ▷ to select **Yes** and then press ⏯ to confirm.
  - "Copy successfully!" will be displayed. If the unit does not have enough free internal memory, "No enough memory" will be displayed. Delete some files before you try to copy files again.

If the photo in the internal memory is viewed now, the "Copy" item is disabled because the photo in the internal memory cannot be copied to the external memory. e.g. an SD card

- **Delete** – Refer to "Deleteing photo" section below for details.
- **Background music** – Press △ or ▽ to select from **iPod/iPhone**, **USB**, **Memory Card** and **Favorites** to select playing music from which source during slideshow. Select **Off** to turn off background music. Then press ⏯ to confirm. You can also press **MUSIC ON/OFF** to turn on/off the background music during slideshow.
- **Exit** – Press ⏯ to exit the pop-up menu
3. Press **EDIT** or press △ or ▽ to select **Exit** to exit the Edit menu.

The effects of "Rotate", "Zoom" and "Effect" will be automatically resumed to normal when the next photo is displayed during the slideshow.

Deleting photo
1. During playback of photos in the internal memory of the unit (i.e. Favorites , press **EDIT** to pause slideshow and enter the pop-up Edit menu.
2. Press △ or ▽ to select **Delete.**
3. "Are you sure you want to delete the selected file" will be displayed. Press ◁ or ▷ to select **Yes** and then press ⏯ to confirm.
4. "Delete successfully!" will be displayed.

Video

Viewing video

The PC requirements for muvee software installation are shown below:
1. Processor: Intel Pentium 4, AMD Athlon 64 (or equivalent), 2GHz or higher
2. Memory: 1GB RAM
3. Video memory: 128MB
4. Operating system: Microsoft Windows 7, Microsoft Windows Vista, Microsoft XP Service Pack 3.

This digital photo frame only plays motion JPEG generated by muvee Reveal. Refer to the user manual in the CD-ROM, which is included in the package. This manual provides instructions for how to install the included muvee Reveal software and instructions about how to create a muvee file and save it to the memory card or USB flash drive.

1. Insert an SD, MMC or MS card into the SD/MMC/MS card slot or insert a USB flash drive into the USB connector.
2. In Main menu, press ◁ or ▷ to select the source of video from Card , USB and Favorites . Then press ⏯.
3. Press ◁ or ▷ to select and press ⏯.
4. Press △ or ▽ to highlight the desired file.
5. Press ⏯ to start video playback.
6. To pause the video playback, press ⏯. Press ⏯ again to resume playback.
7. Press ◁ or ▷ to select the previous/next file. Press and hold ◁ or ▷ to rewind or fast forward.
8. Press and hold ⏯ to stop video playback and return to the thumbnail screen.
9. Press △ or ▽ to adjust the volume. The volume bar will be displayed for a while once you change the volume.

Copying video
1. During playback of video files on SD, MMC or MS card or USB, press **EDIT** to enter the pop-up Edit menu. Press **EDIT** in the video list before playback can also enter the pop-up Edit menu.
2. Press △ or ▽ to select **Copy** and then press ⏯.
3. "Copy to internal memory? If the same file exist will be overwritten." will be displayed. Press ◁ or ▷ to select **Yes** and then press ⏯ to confirm.
4. "Copy successfully!" will be displayed. If the unit does not have enough free internal memory, "No enough memory" will be displayed. Delete some files before you try to copy files again.
5. Press **EDIT** or press △ or ▽ to select **Exit** to exit the Edit menu.

If the video in the internal memory is viewed now, the "Copy" item is disabled because the video in the internal memory cannot be copied to the external memory. e.g. an SD card

Video

2. Press △ or ▽ to select **Copy** and then press ⏯.
3. "Copy to internal memory? If the same file exist will be overwritten." will be displayed. Press ◁ or ▷ to select **Yes** and then press ⏯ to confirm.
4. "Copy successfully!" will be displayed. If the unit does not have enough free internal memory, "No enough memory" will be displayed. Delete some files before you try to copy files again.

If the video in the internal memory is viewed now, the "Copy" item is disabled because the video in the internal memory cannot be copied to the external memory. e.g. an SD card

5. Press **EDIT** or press △ or ▽ to select **Exit** to exit the Edit menu.

Deleting video
1. During playback of video files in the internal memory of the unit (i.e. Favorites , press **EDIT** to enter the pop-up Edit menu.
2. Press △ or ▽ to select **Delete.**
3. "Are you sure you want to delete the selected file" will be displayed. Press ◁ or ▷ to select **Yes** and then press ⏯ to confirm.
4. "Delete successfully!" will be displayed.
5. Press **EDIT** or press △ or ▽ to select **Exit** to exit the Edit menu.

Repeat
1. During playback of video files on SD, MMC or MS card, USB or video files in internal memory of the unit (i.e. Favorites , press **EDIT** to enter the pop-up Edit menu. Press **EDIT** in the video list before playback can also enter the pop-up Edit menu.
2. Press △ or ▽ to select from **Repeat one** and **Repeat all** and then press ⏯.
3. Press **EDIT** or press △ or ▽ to select **Exit** to exit the Edit menu.

Settings

Settings options
1. In Main menu, press ◁ or ▷ to select . Press ⏯ to enter Settings menu.
2. Press △ or ▽ to highlight a setting.
3. To change the value of date and time, press ◁ or ▷ to highlight the options and press △ or ▽ to change the values. Press ⏯ to confirm the date and time. To change options other than date and time, press ◁ or ▷ to change the values and then press ⏯ to confirm.
4. Press ■ to exit Settings menu.

Settings options available are:
- **Image Display** – To crop a photo to fit the screen or adjust to original aspect ratio.
- **Slideshow Transition** – To set transition effect between two photos. Options are: Random, Blinds, Melt, Mosaic, Roll, Snail and Float.
- **Slideshow interval** – To set the interval between two photos. Options are 5s, 15s, 30s and 60s.
- **Brightness** – To set the brightness of the screen. Options are High, Mid and Low.
- **Date** – To set the date.
- **Time** – To set the time.
- **Time Format** – To set the time format (12 hours or 24 hours).
- **OSD Language** – To set the language of the user interface. Options are English, French and Spanish.
- **Reset Setting** – To reset all settings to factory default.
- **About** – To show the information of the firmware and the model number.
- **Exit** – To go back to Main menu.

Warranty information

Limited warranty
12 Month Limited Warranty
Applies to Acoustic Research Audio/ Video Products

AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malwares, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through abuse, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

How to make a warranty claim:

- If your product is capable of storing content (such as an mp3 player, digital voice recorder, etc), it is recommended to make periodic backup copies of content stored on the product. If applicable, before shipping a product, make a back up copy of content or data stored on the device. Also, it is advisable to remove any personal content which you would not want exposed to others. IT IS LIKELY THAT CONTENTS AND DATA ON THE DEVICE WILL BE LOST DURING SERVICE AND REFORMATTING. AUDIOVOX ACCEPTS NO LIABILITY FOR LOST CONTENT OR DATA, OR FOR THE SECURITY OF ANY PERSONAL CONTENT OR DATA ON THE RETURNED DEVICE. Product will be returned with factory default settings, and without any pre-loaded content which may have been installed in the originally purchased products. Consumer will be responsible for reloading data and content. Consumer will be responsible to restore any personal preference settings.
- Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials.
- Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

Audiovox Electronics Corp.
Attn: Service Department.
150 Marcus Blvd.
Hauppauge N.Y. 11788
1-877-833-3491

- Insure your shipment for loss or damage. Audiovox accepts no liability in case of damage or loss en route to Audiovox.
- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- A new or refurbished unit will be shipped to you freight prepaid.

What we will do:
Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.

For Canada Customers, please ship to:
Audiovox Return Centre
c/o Genco
6685 Kennedy Road,
Unit#3, Door 16,
Mississauga, Ontario
L5T 3A5

Visit **http://store.audiovox.com** to find the best accessories for your products.

For Customer Service
Visit Our Website At
www.acousticresearch.com
Product Information, Photos, FAQ's, Owner's Manuals

© 2010 Audiovox Accessories Corporation
111 Congressional Blvd., Suite 350
Carmel, IN 46032
Trademark(s) ® Registered
Printed in China

Illustrations contained within this publication are for representation only and subject to change.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice.

Downloaded from www.Manualslib.com manuals search engine